

HOW TO KEEP THE POWER CABLE RUNNING INTERNALLY

1. Please ensure your content meets the following specification:

IMAGES

Resolution: 1080 x 1920px

File Format: jpg

 
VIDEO

Resolution: 1080 x 1920px

File Format: MP4




2. On your computer, copy your content (jpgs and/or videos as above) onto a blank USB memory stick. Once copied, safely remove the USB from your computer.

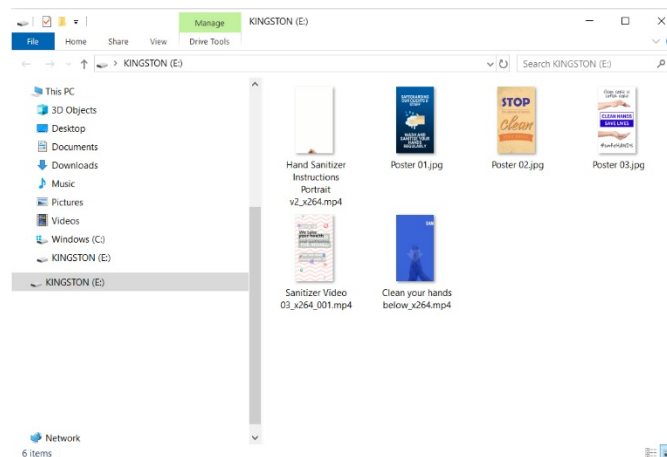


3. Use the keys provided to open the two locks on the side of the unit and carefully open the display



4. Insert the USB into USB Port 1. The content will update on the display.

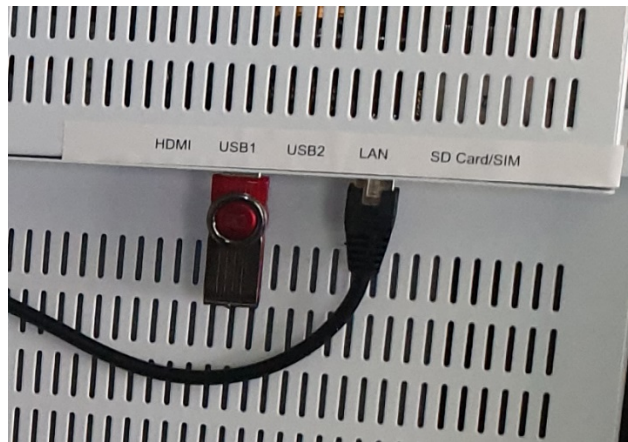

5. When the first pop up message appears, use a USB mouse to click the checkbox 'Use by default for this USB device?' and click OK (a USB mouse can be inserted into USB2).

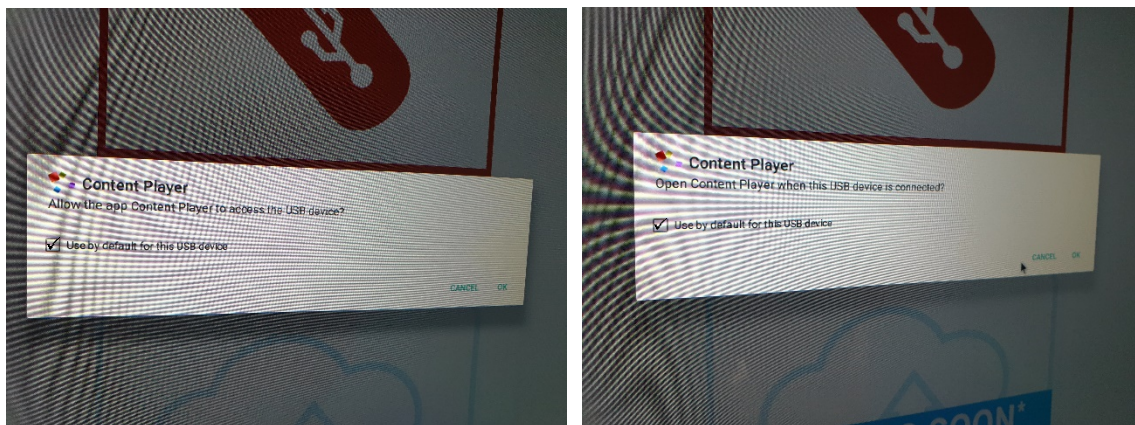

NOTE – This only needs to be done once for a particular USB memory stick. When content is updated in the future using the same USB memory stick is used, it will automatically update

6. Your content will now update. Ensure all content is playing and remove the USB stick.